



File Name: bose 3 in 1 manual.pdf

Size: 4445 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 29 May 2019, 13:24 PM

Rating: 4.6/5 from 766 votes.

Status: AVAILABLE

Last checked: 7 Minutes ago!

In order to read or download bose 3 in 1 manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bose 3 in 1 manual . To get started finding bose 3 in 1 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

bose 3 in 1 manual

It will help you set up and operate your system properly, and enjoy all of its advanced features. Yet its few parts require little effort to set up, so you can enjoy your new system's performance right. Dolby Digital is the most common means of encoding audio for DVDVideo. It is the width of the picture relative to the height. Save all packing materials, which provide the safest way to transport your system. Check to be sure your system includes the parts shown in Figure 1. If any part of the system appears damaged, do not attempt to use it. Notify Bose or your authorized Bose sheet included in the carton. The Acoustimass will connect to a power outlet. For ordering information, refer to "Accessories" on page 46. Figure 8 System placement for ideal coverage CAUTION Be sure to read the section on making the connections before you plug in the system. Figure 12 Making the left and right speaker connections Note When properly inserted, there will be a small gap between the plug and the speaker panel. Unwind the wires for each antenna to provide the best reception. Note An outdoor antenna may be used in place of the two that are supplied. Note If your TV does not have an audio output jack, see "If your TV does not have audio out put jacks". This cable may be purchased from your Bose dealer or a local electronics retailer. Before you proceed, you must determine if your TV has audio output jacks. Consult your TV owner's guide if you need assistance. When the TV is on, the words "VIDEO 1", "VIDEO 2", or "AUX". For this type of connection, you will need one additional video cable, which can be purchased at your local electronics store. Figure 22 AUX input connections Connecting other playback equipment Other playback components, such as an audio CD changer, can be connected to the AUX inputs on the rear panel of the media center Figure 22. Or, you can press any source button on the remote to select the source and turn the system on at the same time. <http://www.buyanycarnow.co.uk/uploadedfiles/9000x-af-drives-user-manual.xml>

- **bose 3 in 1 manual, bose 3-2-1 manual, bose 3 2 1 manual series ii, 1.0.**

See "Selecting the correct video input on your TV". To contact Bose for information on how to purchase the remote separately, refer to the address sheet included with the system. Control panel and buttons The media center has eight buttons located on the top control panel. To enter the Settings menu Before you begin, make sure you have selected the correct Video Input setting on your TV. To check the system status Figure 27 A DVD status example Settings DVD You can also press any source button on the remote to turn the system on and select the source at the same time. The 8 levels of parental control correspond with the ratings on DVDs, and are usually equivalent to standard movie ratings provided by the Motion Picture Association of America MPAA. For more details on changes you can make to the settings, refer to the Sound Adjustments and System Adjustments sections of this guide. For more details on changes you can make to the settings, refer to the Sound Adjustments and System Adjustments sections that follow in this guide Selection CD setting options Sleep Timer. To store a particular station 1. Automatically engages Bose Dolby Digital bitstream indicates that it contains a mono program. A menu of the available settings for the current source will be displayed on your TV screen. 3. Using the Tune 4. DVD Setup Video Format Video Black Level DVD Setup submenu The DVD Setup submenu lists options for how the DVD player should operate, including Parental Control. This allows the unit to reset itself. After reconnecting the power cord, wait for the message, "BOSE 321" to appear on the media center display. Details of the warranty are provided on the warranty card that came with your system. Learn more or change settings here. Just type your request below Quick tip Try searching for just one or two words e.g., connection help. Buy Bose 901 Series VI Active Equalizer Version 2 110V features

Designed bose 901 setup, bose 901 eq, bose 901 eq for sale, bose 901 Bose

3.2. <http://genius.pskovedu.ru/site/htmlimages/9001d-manual.xml>

1 GS Series II User Manual Bose Home Theater Systems. Text mode; Bose 3.2 1 Ii Manual Bose 321 Series II Manual Online Media Center Options. Figure 30 Media Bose 3.2.1 GS Series II, 3.2.1 Series II Owners Manual 180 pages. Bose 321 GS Series II Home Cinema System User Guide Manual Operating Instruction. Bose 321 GS Series II User Guide Manual Bose 321 GS Series II Cinema System. Bose 3 2 1 Series Ii Manual This system works great, with remote and owners manual. BOSE AV 321 Series II 321 Home Theater System Media Center DVD Player ONLY. Bose Manuals. Retrevo provides Select one of the categories below to find the User Manuals for your Bose product Bose 321 GSXL User Guide. 321 GS. Bose Bose 3 2 1 Series Ii Manual The bose 321 series 1 owners manual is available for download. Bose Cinemate Series Ii User Manual download. Were committed to providing the tools and information you need to support the lasting value of your Bose products. Code of ethics example letters, Illinois short form power of, Example of websites, Panasonic dmr e20 manual, Robot modeling and control solution manual. Reload to refresh your session. Reload to refresh your session. Please read this owner's guide carefully and save it for future reference. The exclamation point within an equilateral triangle alerts the user to the presence of important operatingAs with any electronic products, use care not to spill liquids into any part Not suitable for children under age 3. Contact your physician if you have questions on whether this It is neither designed nor tested for use outdoors, in recreational vehicles, or Please check your local building codes for the correct type of wire and cable required for inwall installation. Important Safety Instructions Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with a dry cloth. Do not block any ventilation openings.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed If this equipment does cause Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate This device complies with part 15 of the FCC Rules and Industry Canada license exempt RSS standards. Operation is subject to the following two conditions 1 This device may not cause harmful interference, and This Class B digital apparatus complies with Canadian ICES003. This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be colocated or be operating in conjunction with any other antennas or transmitters. The temperature range of this product is 32F 0C to 113F 45C. This symbol means the product must not be discarded as household waste, and should Proper disposal and English 3 Names and Contents of Toxic or Hazardous Substances or Elements. Toxic or Hazardous Substances and Elements. Lead Mercury Cadmium Hexavalent Biphenyl PBB. Polybrominated. PCBs. Metal parts. Plastic parts. Speakers. Cables. Part Name. O Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit. X Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is. Please complete and retain for your records We suggest you keep your receipt with this owner's guide. HDMI is a trademark or registered trademark of HDMI Licensing LLC in the United States and other countries. Manufactured under license from Dolby Laboratories. Dolby and the double D symbol are All Rights Reserved. SoundTouch and the wireless note design are trademarks of Bose Corporation in the U.S. and other countries. WiFi is a registered mark of the WiFi Alliance. No part of this work may be reproduced, modified, distributed, or otherwise used without Introduction. System Features. 7. Unpacking the system. 8.

Placement guidelines. 9. Sample system placement. 9. Attaching the rubber feet to the Acoustimass module. 10. Connecting the Acoustimass module to power. 11. Setting Up the Speakers. Connecting the front speakers. 12. Connecting the rear speakers. 13. Wall mounting the speakers. 13. Setting Up the Console. Connecting the console to your TV's HDMI ARC connector. 14. TVs without an HDMI ARC connector. 15. Use a secondary connection in the following configurations. 15.

Connecting the console to other sources. 15. Connecting to nonHDMI compatible sources. 16. Audioonly sources. 16. Connecting the console to power. 16. Starting Up the System. Installing the remote control's batteries. 17. Powering on the system. 17. Finishing Setup. Checking for sound. 18. Changing the language on the console. 18. English 5Using the System. Remote control buttons. 20. Programming the universal remote control. 21. Consumer Electronics Control. 21. Test your HDMIconnected sources for CEC. 22. Program the remote to control your source. 23. Source selection. 24. Select a source connected to your TV. 24. Universal source buttons and console connectors. 24. Adjusting the volume. 25. Function buttons. 25. Programming a nonBose remote control. 25. Getting System Information from the Display. Understanding messages on the display. 26. Using the System menu. 26. Error messages. 28. Acoustimass module status indicator. 28. Care and Maintenance. Troubleshooting. 29. Factory reset the system. 31. Reset a source button on the remote control. 31. Cleaning. 32. Customer service. 32. Limited warranty. 32. Technical information. 32The CineMate 520 system delivers spacious, true 5.1 surround sound from small, System FeaturesInternet radio, music services where available and your music library. If you have. Key BenefitsEnglish 7Unpacking the system. Carefully unpack the carton and confirm that the following parts are includedAcoustimassCenter speaker. Console power cord. Universal remote control. Console.

Front speaker cable. HDMI cable. Rear speaker cable. Rubber feet. The appropriate power cords for your region are supplied. Contact your authorized. Refer to the contact sheet inPlacement guidelinesVibration can cause the. Acoustimass module to move, particularly on smooth surfaces likeFront speakersCenter speakerRear speakersConsole. Do NOT place the TV on top ofSample system placement. English 9. Attaching the rubber feet to the. Acoustimass module. Attach the rubber feet to the Acoustimass module to protect your floor.Rubber foot. Bottom of Acoustimass moduleConnecting the Acoustimass moduleEnglish 11Connecting the front speakersSpeaker Connections connector on the console.Connecting the rear speakersSpeaker Connections connector on the console. Wall mounting the speakers. To purchase these accessories, contact your local Bose dealer or visitEnglish 13Connecting the console to your TV's. HDMI ARC connectorTVs without an HDMI ARC connector. If your TV does not have an HDMI ARC connector, you may need to make aUse a secondary connection in the following configurationsRefer to your TV owner's guide for more information.Connecting the console to other sources. If your source is nonHDMI compatible, use different audio and video cablesConnect other sources to theEnglish 15Connecting to nonHDMI compatible sources. If your source is nonHDMI compatible, connect it to your TV using audio and videoRefer to your TV owner's guide for more information. Tip If your source has IN and OUT audio connector panels, use audio OUT. Audioonly sources. If your audioonly source, such as a media or CD player, is nonHDMI compatible,You can use anYou can access these settings usingConnecting the console to powerInstalling the remote control's batteriesPowering on the system. PressThe console powers on. The display defaults to CBL SAT for first time power on. Otherwise, the displayYou can disable. AUTO OFF using the System menu see page 26. English 17Checking for soundTV input.

You may need to use a different remote.Check that no sound is coming from the TVChanging the language on the console. Use the remote control to change the language on the console.Tip Look for theThe ADAPTiQ audio calibration customizes the sound of the system to theDuring the ADAPTiQ audio calibration, a microphone on the top of theEnglish 19Remote control buttons. Use the remote to control sources connected to your system, adjust the systemSource selection. Selects a sourceToggles betweenNavigation pad. Lists recorded. DVR programs. System menu. Displays the Internet. TV home page. Previous channel,PlaybackTV aspect ratio. Teletext mode. Closed captioningFunction buttonsProgramming the universal remote control. Consumer Electronics Control. The system supports Consumer Electronics Control CEC. CEC allows you toYour source may support CEC, but refer to it with a different name. Refer to yourCEC controls sources connected

to Refer to your English 21 Test your HDMI connected sources for CEC. Test each of your sources for CEC using the remote control. Refer to your source Power on your TV. The source button glows. The source and system power on. If your source does not perform one of the functions, program the remote. Program the remote to control your source. If your source does not support CEC, you can program the remote to control. For example, to program your TV, press and hold. Only the appropriate source button glows. Repeat steps 3 and 4. Press and to navigate. Press and to navigate. Press and to navigate. If your source responds to basic functions, press. If your source does not respond, use the remote control's code scanner to find the code for your source. English 23 Source selection. You can switch between sources by pressing the appropriate source button on the. If your source is connected to the console and does not use CEC, follow this. The source button glows. The source powers on. Select a source connected to your TV.

If your source is connected to your TV, follow this procedure to select the. Press. You may need to press. On some TVs, Universal source buttons and The source buttons on your remote control correspond with the connectors on. For example, HDMI connector. Your source buttons work with any source that is connected to the corresponding. If you are using the optical, coaxial, or analog connectors, you must set the input. You can access these settings using the System menu. Adjusting the volume. On the remote control. Note. If you hear sound coming from your TV, see "Troubleshooting" on page 29. Function buttons. The red, green, yellow and blue buttons on the remote control correspond with the. Programming a nonBose remote control. Refer to your nonBose remote control owner's. Once programmed, the nonBose remote controls basic functions such as power. English 25 Understanding messages on the display. The display on the front of the console allows you to access the System menu and. Using the System menu. AUTO OFF, change the language, set the coaxial, analog and optical inputs for a. Display. System state. Enhance dialogue. Increases the level of dialogue and. Smart volume. Reduces the range of volume levels in a. Adjusts the audio delay to synchronize audio and video. Off. Disables CEC. Disable. The system will not automatically power off. Headphones. Sets the. Disconnect your headphones when not in use. Display. System state. English 27 Error messages. Display. System state. The source is not connected to the console, or the. The source is not connected to the. Refer to the contact. Acoustimass module status indicator. The status indicator on the back of the Acoustimass module provides information. Indicator activity. Acoustimass module state. Amber. Connected to the console. Blinking amber. Disconnected from the console. Slow blinking amber. Available to make a wireless connection to the console. Red. System error. Troubleshooting. Problem. What to do. No power. No sound. Sound is. Remote. Unmute the system. Increase the volume.

Plug the Acoustimass module and console into a live AC mains outlet. Insert the HDMI cable into a connector on your TV labeled ARC or Audio. Return Channel. If your TV does not have an HDMI ARC connector, use a. If using a secondary audio cable, insert the cable into a connector on your. TV labeled Output or OUT, not Input or IN. Secure all cable connections on the speakers, TV and connected sources. If your source is connected to your TV, select the correct TV input. Disconnect headphones when not in use. If connecting your source through the. If you are connecting headphones to the. Headphones using the System menu see page 26. If you see the error message Cannot find Acoustimass, pair the. Acoustimass module with the console see page 30. Factory reset the system see page 31. Insert the HDMI cable into a connector on your TV labeled ARC or. Audio Return Channel if available. Turn off your TV speakers refer to your TV owner's guide. Decrease your TV volume to its lowest setting. English 29 Problem. What to do. Poor or. Intermittent. The Acoustimass module and console are paired at the factory. However, if you. Plug in Acoustimass appears on the display. After the Acoustimass module connects to the console, Pairing complete. Factory reset the system. The system resets. Reset a source button on the remote control. If you are experiencing problems with a source button on the remote control, reset. After performing this procedure, your source button is in CEC mode. Only the appropriate source button glows. The Service and Data

connectors are for service use only. Do not insert any cablesEnglish 31Cleaning. Do not use any solvents, chemicals, orCustomer service. Refer to the contact sheet inLimited warranty. Your system is covered by a limited warranty. Details of the limited warranty arePlease refer to theFailure to register will not affect your limitedThe warranty information provided with this product does not apply in Australia and. Technical information. Power rating 100240V. Console.

Power rating 100240VEnglish 33Lea atentamente esta guia del usuario y guardela para consultarla enEl signo de exclamacion dentro de un triangulo equilatero avisa al usuario de que existen instrucciones deAl igual que con cualquier producto electronico, evite que seLa exposicion a liquidos puede provocar averias oEvite utilizar losNo adecuado para ninos menores de 3 anos.Consulte a su medico si tiene alguna duda acerca de losNo esta disenado ni ha sido probado para uso al aire libre niInstrucciones de seguridad importantesGuarde estas instrucciones. Tenga presentes todas las advertencias. Siga todas las instrucciones. No utilice este aparato cerca del agua. Limpielo solo con un trapo seco. No bloquee las aberturas de ventilacion. Realice la instalacion de acuerdo con las instrucciones del fabricante.Lleve el dispositivo a reparar si presenta algun danoNota SEstos limites estan disenados para ofrecer una proteccion razonableEste equipo genera, utiliza y puede irradiarNo obstante, no se puede garantizarSi este equipo ocasionaLos cambios o modificaciones no aprobados expresamente por Bose Corporation podrian anular la autorizacionEl dispositivo cumple la parte 15 de las normas de la FCC y de exencion de licencias RSS de Industry Canada. El funcionamiento esta sujeto a las dos condiciones siguientes 1 Este dispositivo no puede causar interferenciasEste aparato de Clase B cumple la especificacion canadiense ICES003. Este dispositivo respeta los limites de exposicion a la radiacion de radiofrecuencia establecidos por la FCC y lasNo debe ubicarse ni utilizarse junto aLa eliminacion yEspanol 3PDF Version 1.7. Linearized Yes. Create Date 20140625 1459140400. Creator Adobe InDesign CC Windows. Modify Date 20140625 1459300400. Has XFA No. Metadata Date 20140625 1459300400. Creator Tool Adobe InDesign CC Windows. Document ID uuida2e3607cd338417282711ac17f3265d6. Instance ID uuid8cbafbd3bf8c43d49c8d95faecb5eec5. Producer Adobe Acrobat Pro 11.0.0. Page Count 35.

Ask your question here. Provide a clear and comprehensive description of the issue and your question.An HDMI cable is used to transport audio and video signals between devices. Dust in hardtoreach places is best removed with compressed air. This makes it possible to create a 5.1 effect with only 1 speaker. ManualSearcher.com ensures that you will find the manual you are looking for in no time. Our database contains more than 1 million PDF manuals from more than 10,000 brands. Every day we add the latest manuals so that you will always find the product you are looking for. Its very simple just type the brand name and the type of product in the search bar and you can instantly view the manual of your choice online for free. ManualSearcher. com If you continue to use this site we will assume that you are happy with it. Read more Ok.